


Sump Pump

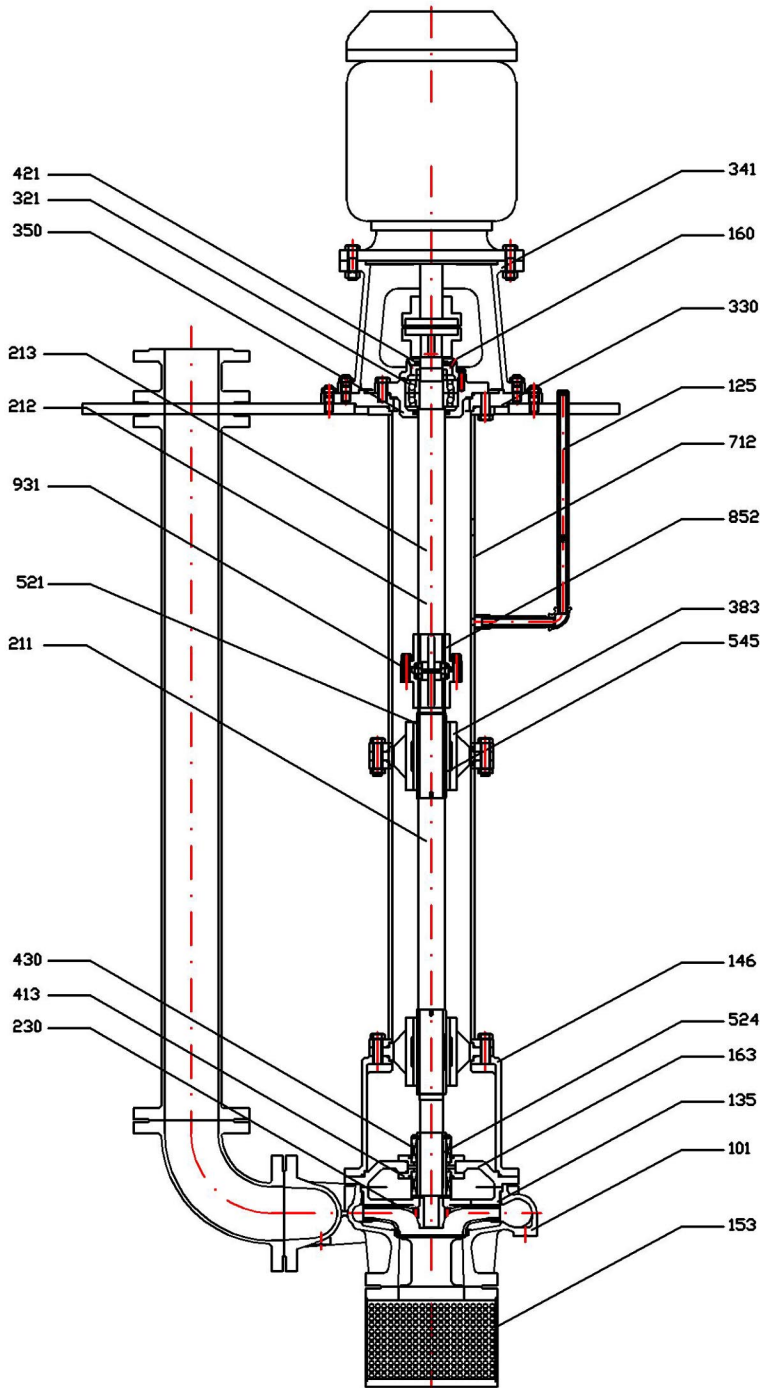

- 101 Volute
- 125 Oil indicator
- 135 Discharge end wear plate
- 146 Pump stool
- 160 Bearing cover
- 163 Discharge cover
- 211 Pump shaft
- 212 Intermediate shaft
- 213 Driving shaft
- 230 Impeller
- 321 Angular contact ball bearing
- 330 Bearing bracket
- 341 Drive stool
- 350 Bearing housing
- 383 Bearing spider
- 413 Seal cup
- 421 Oil seal
- 430 Mechanical seal
- 524 Shaft protecting sleeve
- 545 Bearing bush
- 712 Support column
- 852 Shaft coupling
- 931 Shaft nut